

緊急救援手冊

e 2008



PEUGEOT 總代理 寶嘉聯合

民國一一一年九月二十六日

一、 電動車辨識方式	3
二、 斷電方式	4-5
三、 空氣囊及特殊強度鋼材結構圖/高 電壓組件位置圖	6-7
四、 緊急聯絡窗口.....	7

一、電動車辨識方式


1.車身側邊銘牌



2.尾門銘牌




3.充電孔飾蓋

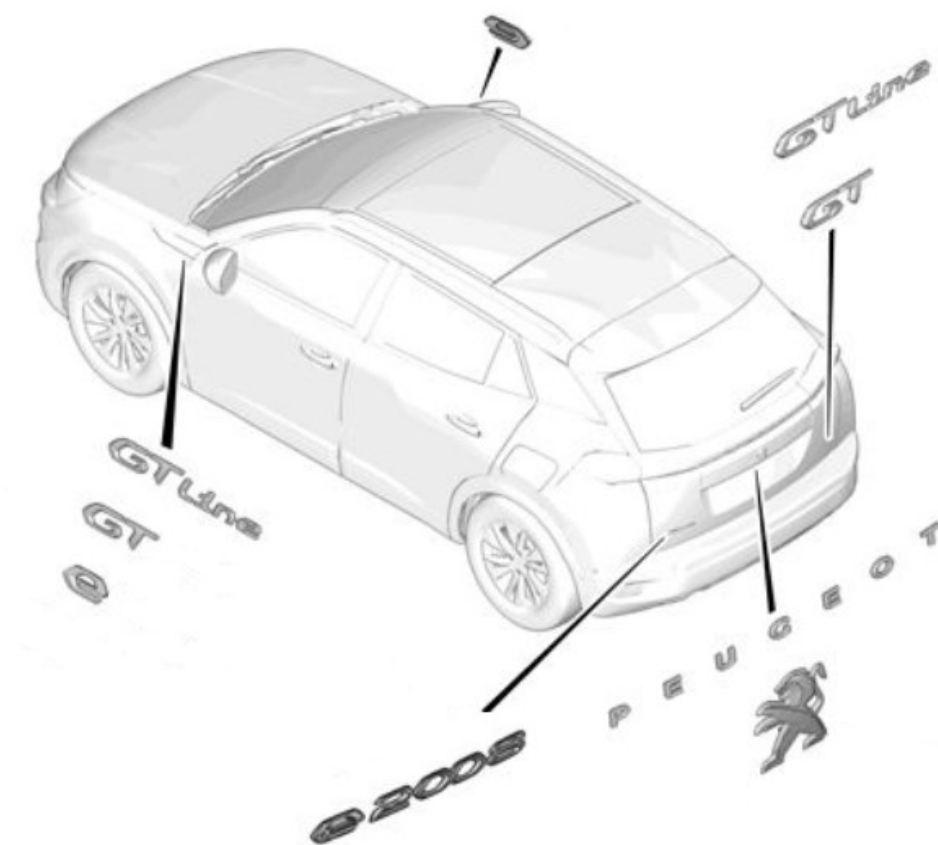

二、斷電方式


(1) 打開左前車門，在車內左下方拉動內把手。

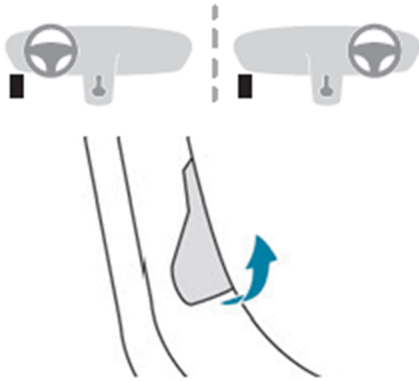


(2) 提起外部安全鎖扣並升起電機室蓋。

(3) 將支架立起放置在支撐槽中以保持電機室蓋打開。


(4) 拉動電機室蓋，檢查是否已確實鎖定。

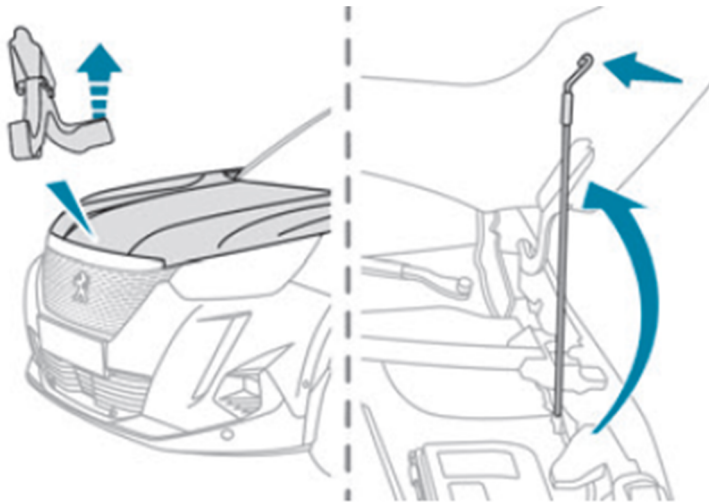

(5) 找到下圖 8 綠色緊急斷路器(eService Plug)，拉出紅色插梢，以手指上下稍微施力再將灰黑色接頭水平拉出約 2 cm 即可斷電。

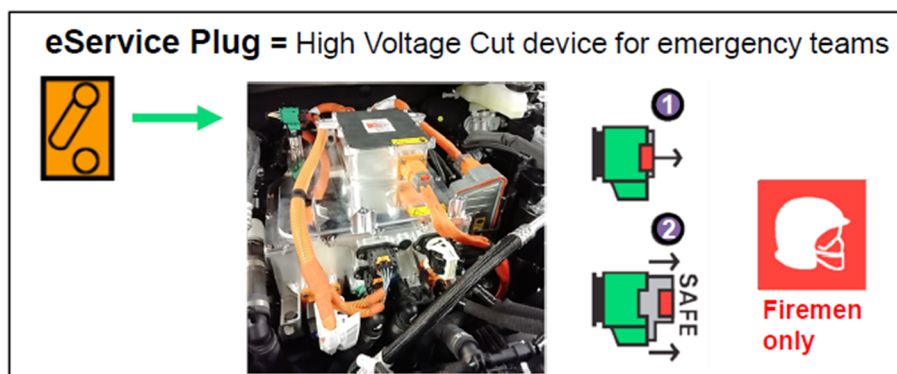

電動馬達

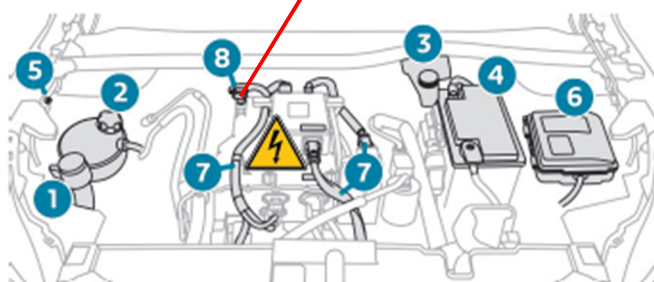


1. 擋風玻璃清洗液儲存桶
2. 冷卻液儲存桶
3. 煞車液儲油桶
4. 電瓶/保險絲
5. 車身搭鐵 (負極)
6. 保險絲盒
7. 400 V 電氣系統
8. 消防員或車輛技師使用的緊急斷路器

充電系統 (電動車型)

400 V 電氣系統

電氣驅動系統透過約 400V 電壓運行，並藉由橘色電線展現其差異性，相關元件會以此圖示標註。

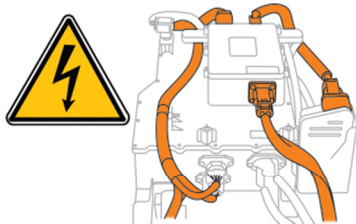


! 電動車的動力總成在使用過程中與關閉點火開關之後都可能會有熱度。

請注意標籤上的警告訊息，尤其是蓋板內側資訊。

因有嚴重燒傷或潛在電擊 (短路/觸電) 等風險，所以嚴格禁止對電動車的電氣系統 (包括驅動電池、連接器、橘色高壓電線和其他內部與外部的零組件) 進行任何工作、修改或改造。

若出現任何問題，請直接聯繫 PEUGEOT 經銷商或授權服務廠。



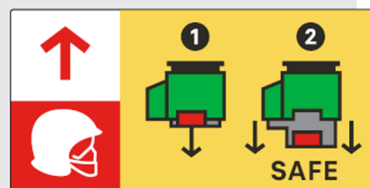


! 此標籤提示僅供消防員和維修服務技師對車輛進行任何工作時使用。其他人不得觸摸以上標示的設備。

! 發生事故或撞擊時
若發生涉及車輛底盤的事故或撞擊，電氣系統或驅動電池可能會嚴重受損。請在安全的情況下立即停車，並關閉點火開關。請立即聯繫 PEUGEOT 經銷商或授權服務廠。


! 若發生火災
請立即離開車輛並疏散所有乘客。因有觸電風險，所以請勿嘗試自行滅火。您必須立即連絡 119 緊急報案專線或 112 緊急救難專線，並告知他們事故已涉及電動汽車。

三、空氣囊及特殊強度鋼材結構圖

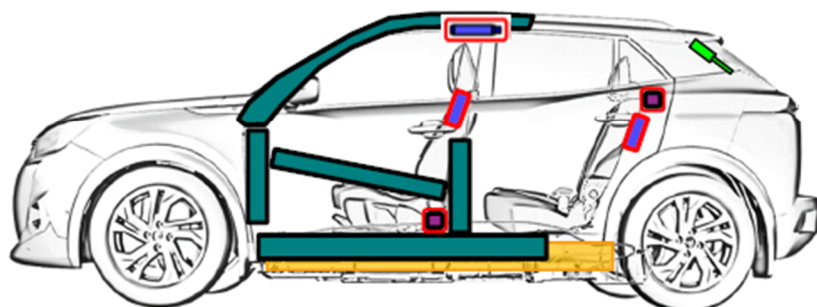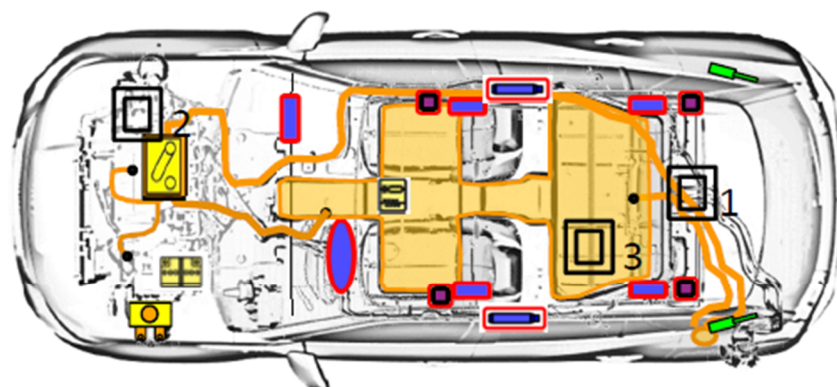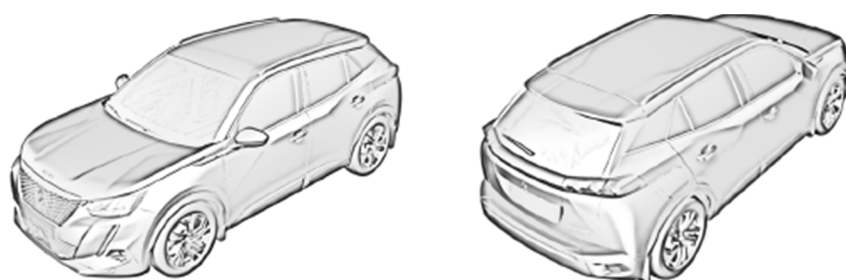

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/ component		Disconnect high voltage device		Fuse box disabling high voltage system		Ultra capacitor, high voltage

高電壓組件位置圖

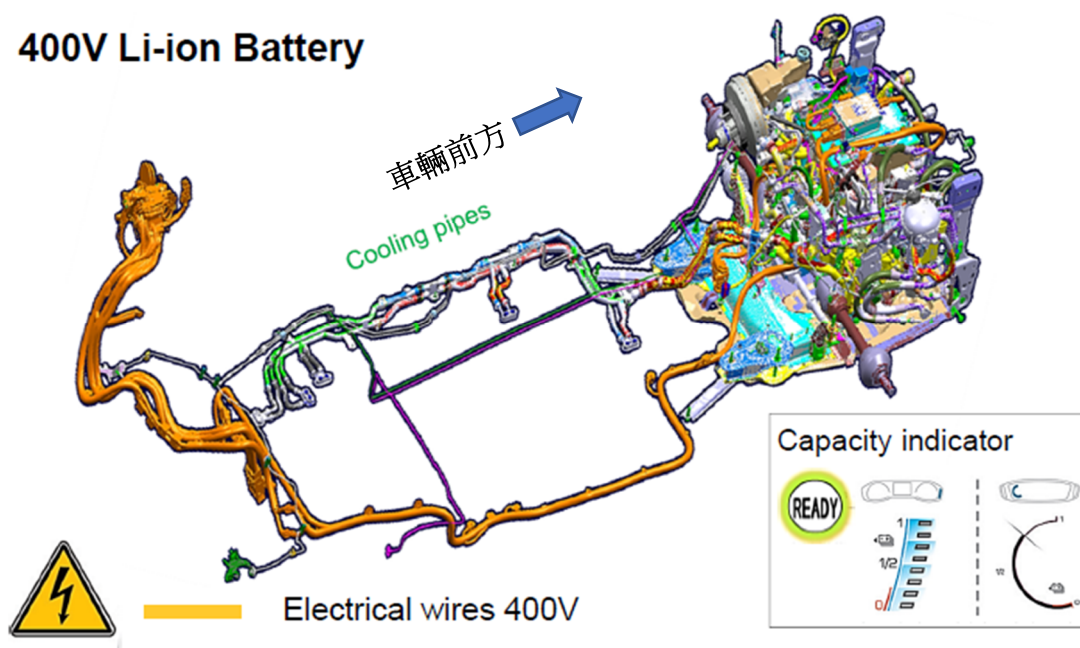

四、緊急聯絡窗口

寶嘉聯合曾先生

電話 (02)8792-6609 #602

或各授權服務廠

(https://www.peugeot.com.tw/service_network/)