

緊急救援手冊

PEUGEOT E5008



PEUGEOT 總代理 寶嘉聯合

民國 114 年 11 月 11 日


一、安全氣囊及車輛結構圖.....3

二、電動車介紹及斷電方式.....4

1. 車輛辨識.....4
2. 固定 / 穩定 / 抬升.....4
3. 解除直接危險 / 安全規則 5
4. 進入駕駛座和乘客區域.....6
5. 儲存的能量 / 液體 / 氣體 / 固體 6
6. 發生火災時.....7
7. 發生淹水時.....7
8. 拖吊 / 運輸 / 存放.....7
9. 重要補充訊息.....8

三、緊急聯絡窗口.....9


一、安全氣囊及車輛結構圖

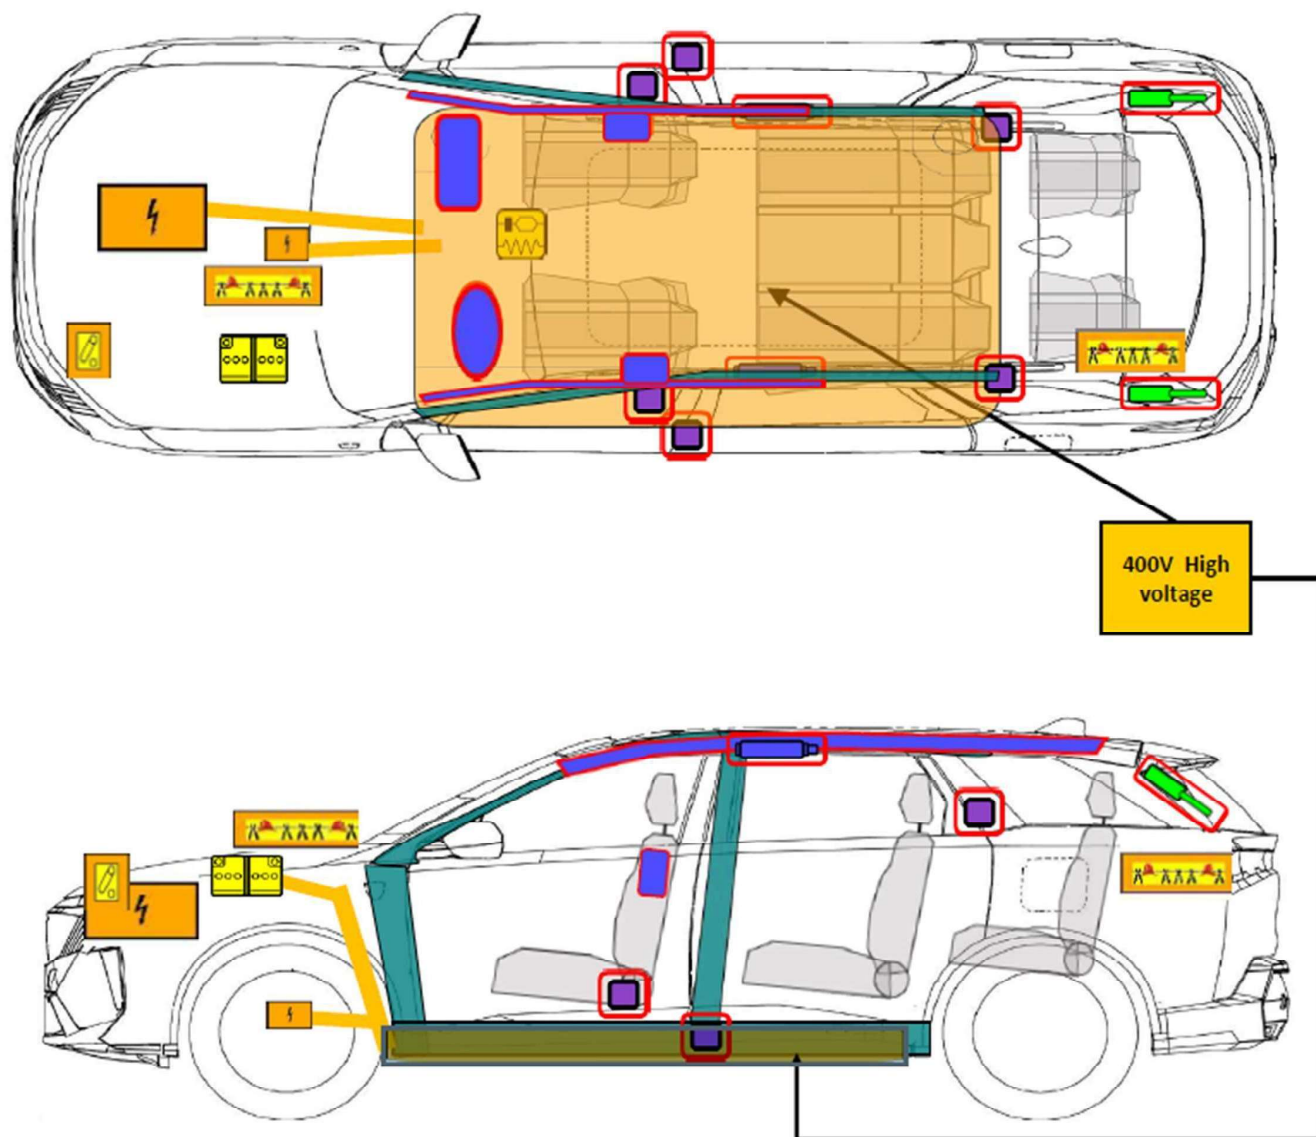

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
	Batterie basse tension		Gas strut / Preloaded spring		High strength zone		Composant haute tension		
	Battery pack, high-voltage		High voltage power cable		Coupure de câble		Dispositif de déconnexion basse tension de la batterie haute tension		

二、電動車介紹及斷電方式

1. 車輛辨識

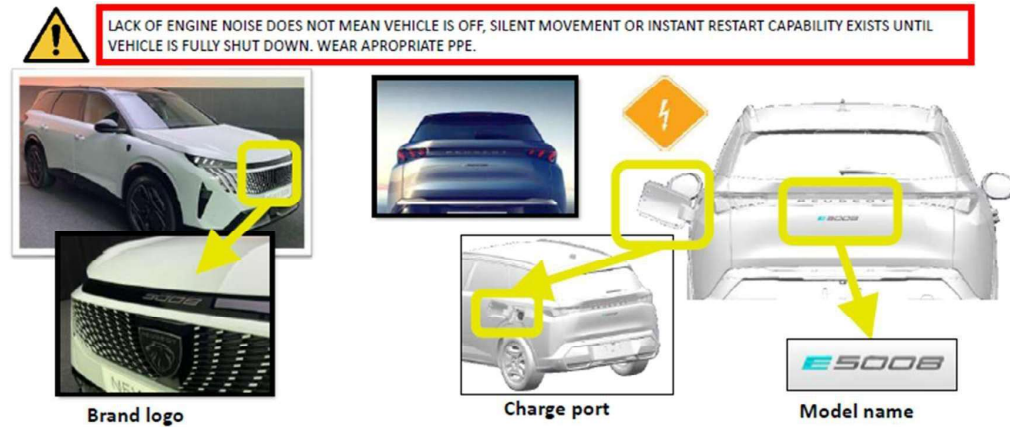


2. 固定 / 穩定 / 抬升




3. 解除直接危險 / 安全規則

Main disabling method

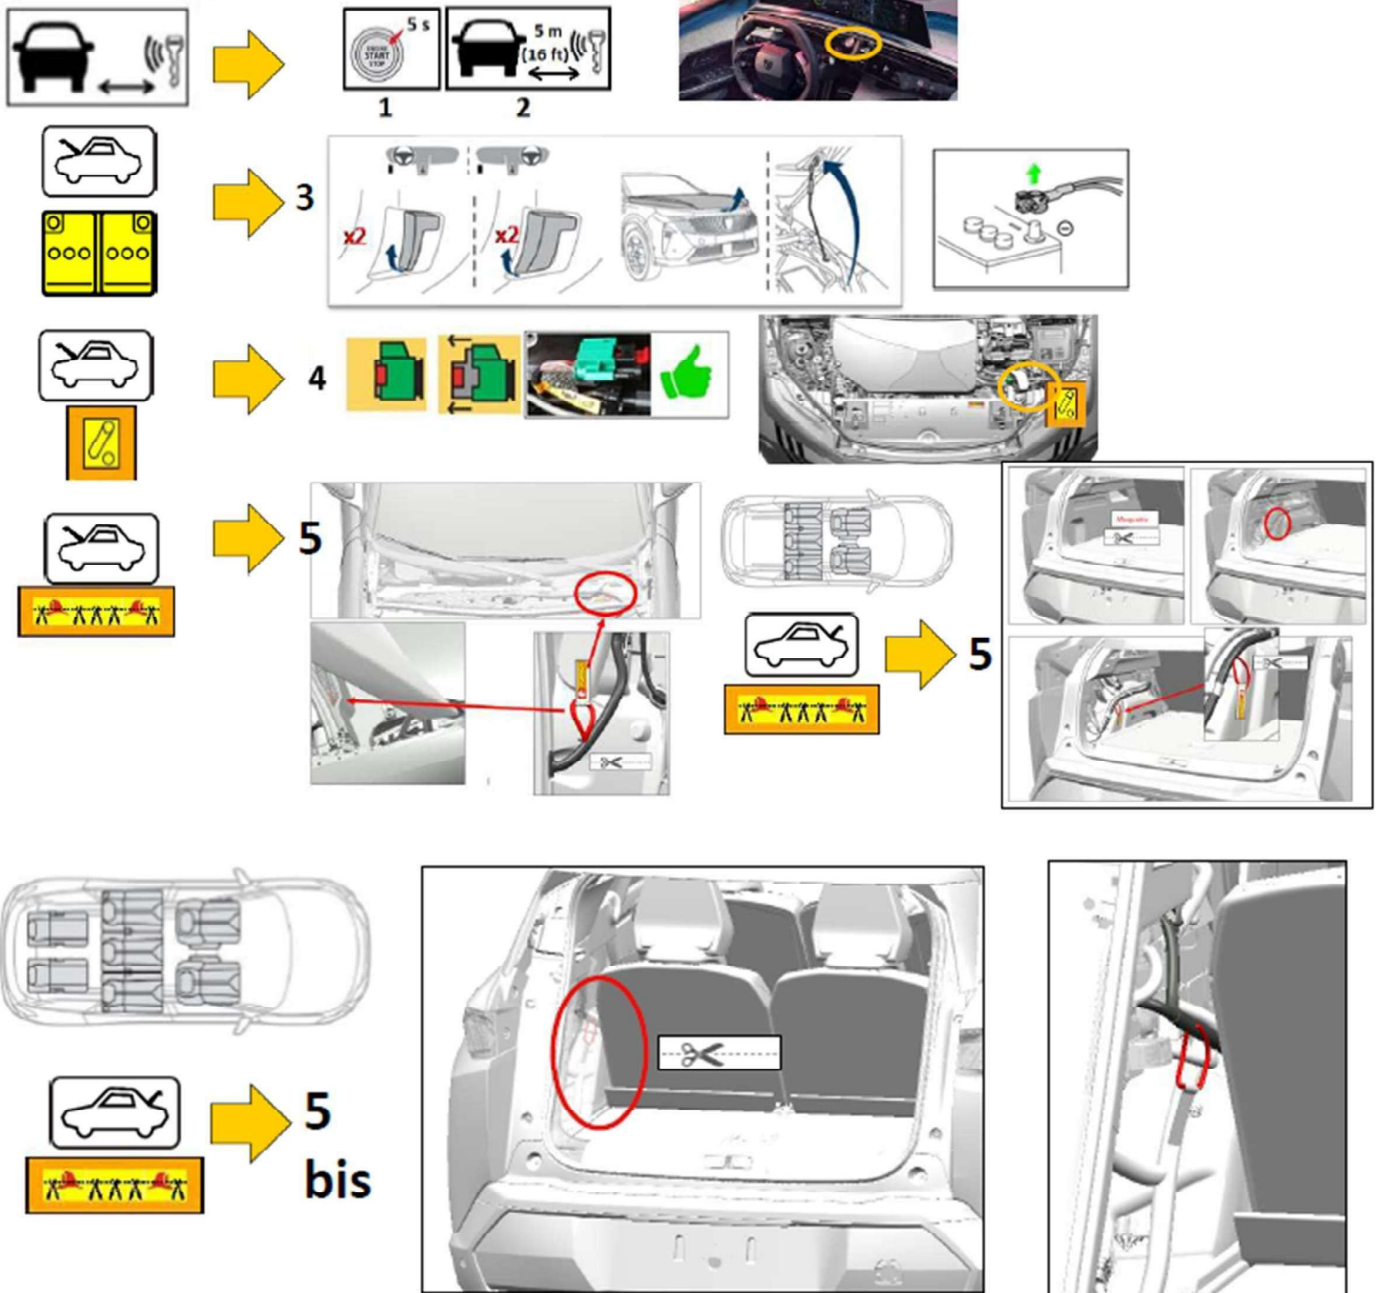

4. 進入駕駛座和乘客區域

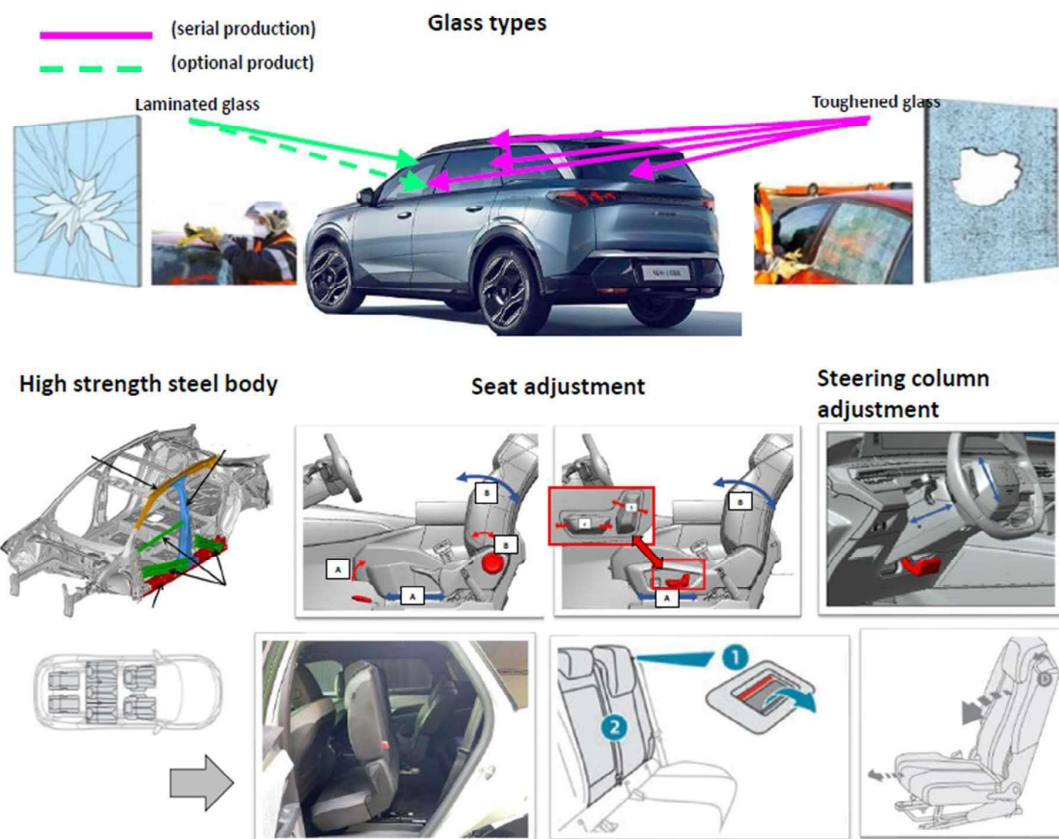

5. 儲存能量 / 液體 / 氣體 / 固體

	12V	  
	400V / Li-ion 73 kWh (standard front wheel drive) 98 kWh (long range)	     
	1234 YF	



when coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.



6. 發生火災時



Use large amount of water



RE-IGNITION POSSIBLE !



Lithium-ion batteries may self-ignite or reignite once the fire has been extinguished. Monitor the temperature of the high-voltage battery!


7. 發生淹水時





Remove the vehicle from the water then refer to chapter 3, Disable direct hazards / safety regulation

8. 拖吊 / 運輸 / 存放

Location front hook

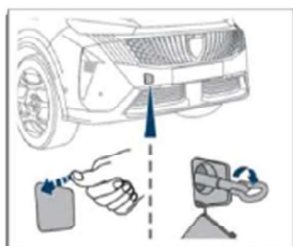

Location rear hook

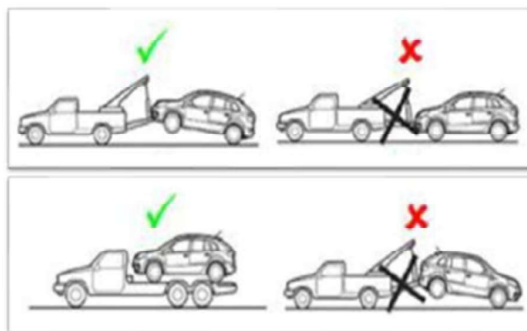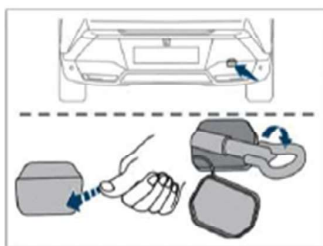


STORE AT SAFE DISTANCE FROM OTHER VEHICLES !



RE-IGNITION POSSIBLE !

9. 重要補充訊息

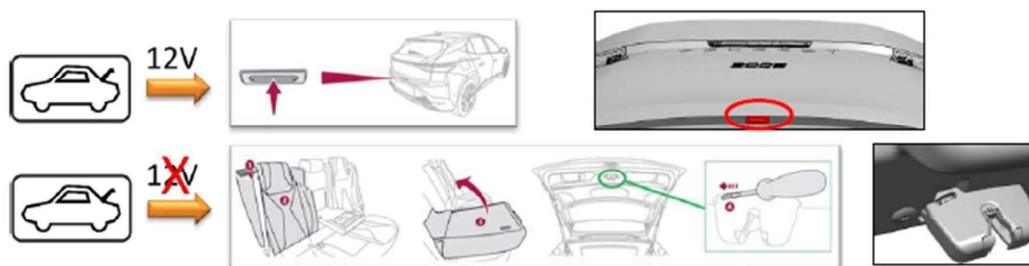

BEV FWD



三、緊急聯絡窗口

寶嘉聯合顧客服務中心

0800-207-307(24 小時)